


# STEEDA FOCUS STRUT TOWER BRACE

Installation Instructions for Part #:555-5611, 555-5711

- 1) Unscrew the brake fluid reservoir cover and turn it to the side to make room to install the strut tower brace. On some 2002 and later Focus there is an EGR assembly that needs to be relocated for the brace to fit. It has two 7mm bolts. It's located next to the brake reservoir. Relocate using one bolt and the plastic nipple that sticks out off the fire wall as shown in the pictures below.
- 2) Remove the two nuts on each strut tower which are closer to the engine. It is not necessary to remove the third (outer) nut.
- 3) Set the strut tower brace on the car with the holes in the end brackets over the studs on the strut tower.
- 4) Reinstall the nuts on the strut tower, over the strut tower brace brackets. Torque nuts to 18 ft-lb. (25 Nm).
- 5) Screw the cap back onto the brake fluid reservoir.

© Steeda Autosports Inc. All Rights Reserved 2002 *STBFocus.doc*

1/02

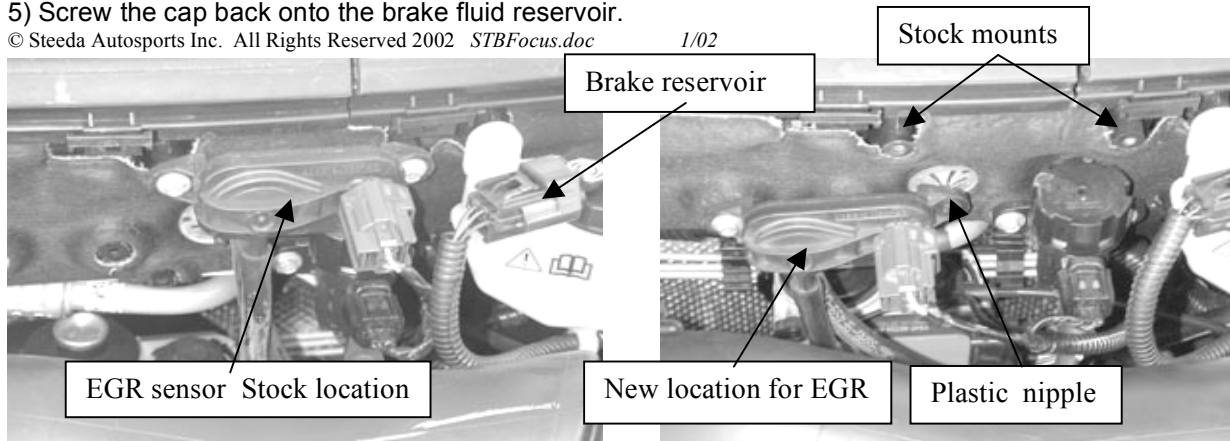

# STEEDA FOCUS STRUT TOWER BRACE

Installation Instructions for Part #:555-5611, 555-5711

- 1) Unscrew the brake fluid reservoir cover and turn it to the side to make room to install the strut tower brace. On some 2002 and later Focus there is an EGR assembly that needs to be relocated for the brace to fit. It has two 7mm bolts. It's located next to the brake reservoir. Relocate using one bolt and the plastic nipple that sticks out off the fire wall as shown in the pictures below.
- 2) Remove the two nuts on each strut tower which are closer to the engine. It is not necessary to remove the third (outer) nut.
- 3) Set the strut tower brace on the car with the holes in the end brackets over the studs on the strut tower.
- 4) Reinstall the nuts on the strut tower, over the strut tower brace brackets. Torque nuts to 18 ft-lb. (25 Nm).
- 5) Screw the cap back onto the brake fluid reservoir.

© Steeda Autosports Inc. All Rights Reserved 2002 *STBFocus.doc*

1/02

